

FULL THROTTLE RIDER MOTO GLOW


Ultimate shine, ultimate protection

Description

Full Throttle Rider Moto Glow with PTFE's professionally painted surfaces with a hard, mirror-like finish, protecting from oxidation, ultra violet rays and dirt. PTFE is chemically inert to all other known chemicals, providing protection from corrosives, salts and insects, and never turns gray or yellow when exposed to sunlight. This unique formula provides over 5,000 particles of PTFE protection per square inch.

Full Throttle Rider Moto Glow with PTFE is especially formulated for ease of application by hand. A catalyst removes road film and detergent build-up, often eliminating the need to use rubbing compounds. Lasting up to a year if applied properly, Full Throttle Rider Moto Glow with PTFE provides a great shine with the ultimate in long-term paint protection and greatly reduces fading due to exposure to sunlight.

- Ultimate shine
- Ultimate protection
- Sun shield protects against fading
- Easily applied by hand
- Dirt and grime wash off more easily
- Safe for clear-cote applications
- Seals against oxidation, corrosives, dirt and insects
- Extremely durable

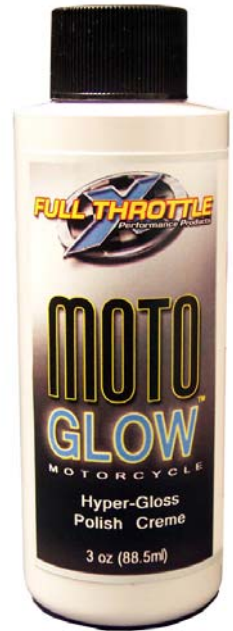

Applications

Approved for use on all enamel, lacquer, metal flake and metallic painted surfaces, fiberglass, formica and wood surfaces, Full Throttle Rider Moto Glow with PTFE can be applied to almost every painted surface on your motorcycle.

Non-abrasive, safe for clearcoat finishes.

Directions

1. Wash vehicle or painted surface with a strong detergent, rinse and dry.
2. Apply Full Throttle Rider Moto Glow with PTFE to a soft cloth and wipe onto the painted surface using circular motions. Spread product evenly over the surface with overlapping movements to insure coverage. Rub thoroughly into surface, allowing full penetration.

(Do not apply in direct sunlight. If applied with an orbital buffer, use light pressure.)

3. Allow to dry (several minutes) to a white haze. Rub vigorously with a clean, dry terry cloth towel, or polish with an orbital buffer. Vigorous rubbing action activates proprietary bonding agents that give Full Throttle Moto Glow with PTFE its long lasting shine and seal.

(For an even greater shine, reapply Full Throttle Rider Moto Glow with PTFE after 48 hours of curing time.)

Package: 24 3 oz bottles per case

Part Number: FMO 25